




PA 178
1/2 x 2 3/8

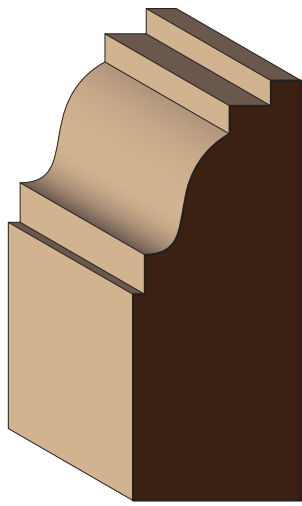


BA 127
7/8 x 2 3/16
American Late
19th Century

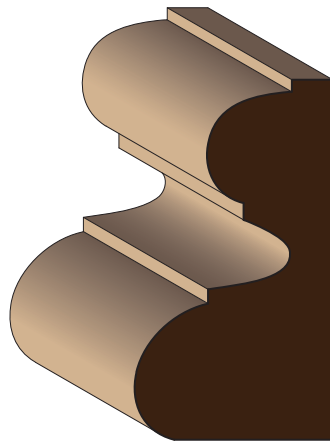


BA 177
1 x 1 7/8

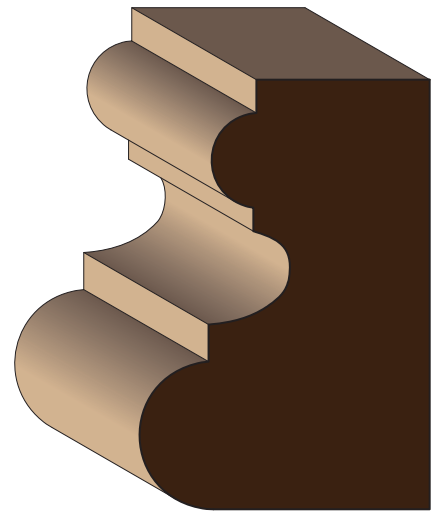


BA 202
1 1/2 x 2 1/4

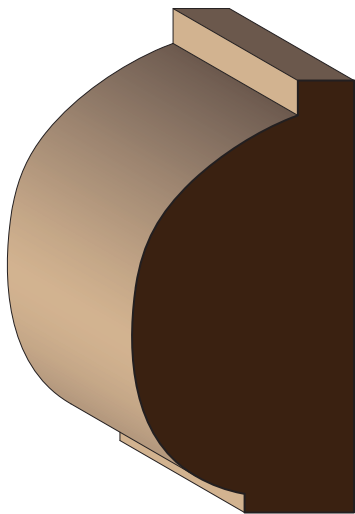


BA 161
1 1/8 x 2 1/4

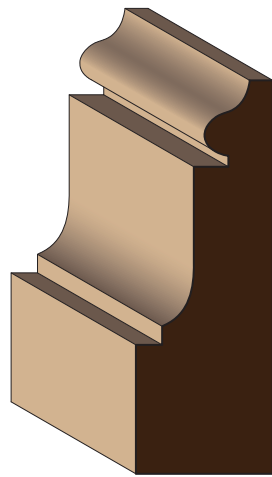


BA 232
1 1/16 x 2

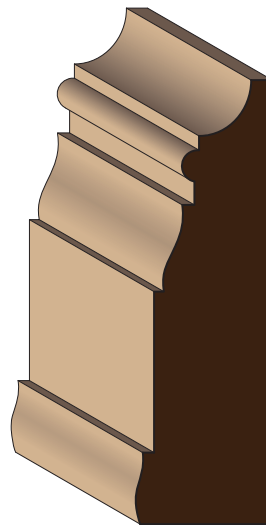


BA 144
1 1/16 x 2 5/16
American Late
19th Century

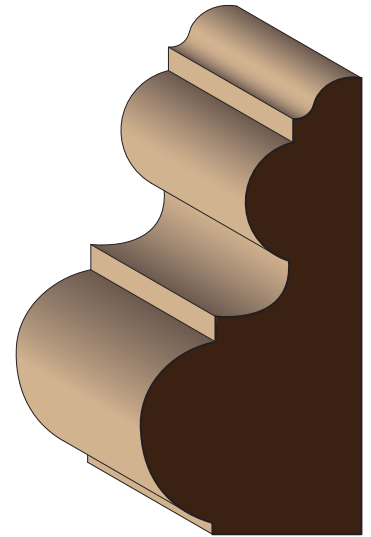


BA 316
1 1/8 x 2 5/16
American Victorian

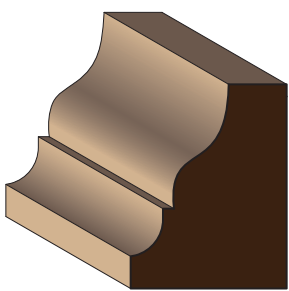


PA 13
13/16 x 1
American Late
19th Century

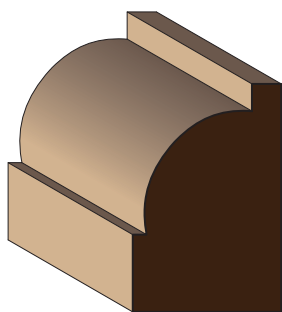


PA 87
3/4 x 1 3/16

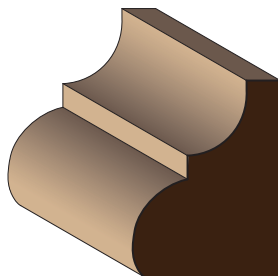

BA 106
3/4 x 1
English 18th
Century

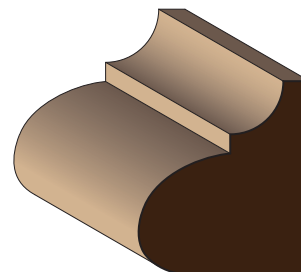

BA 108
7/8 x 1
English 18th
Century

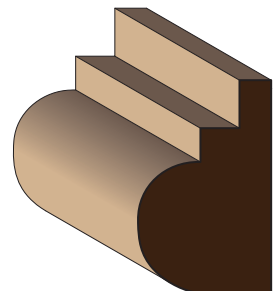

PA 90
1 1/16 x 1 1/16
American 18th
Century