




PA 135
1 1/16 x 1 3/8

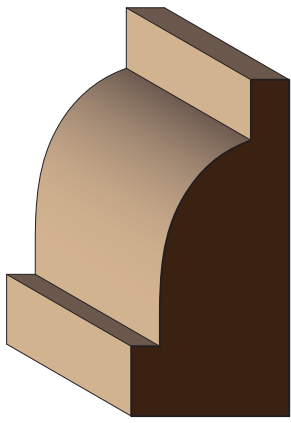


BA 16
1 3/16 x 1 3/4
American Late
19th Century

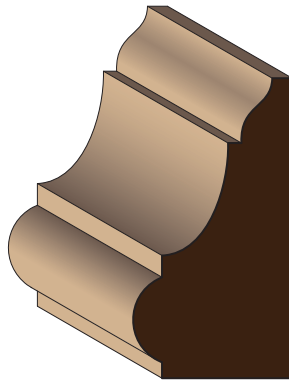


BA 86
1 3/16 x 1 9/16

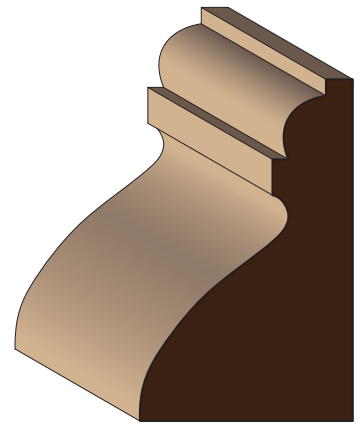


BA 383
1 1/8 x 1 3/4
American Late
19th Century

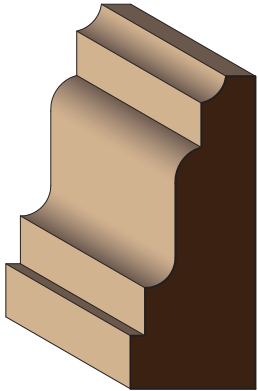


PA 218
5/8 x 1 5/8

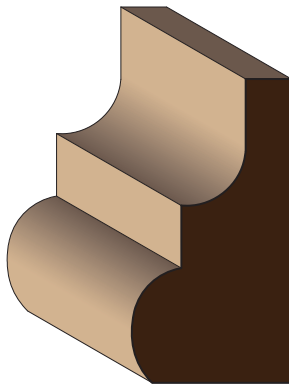


BA 149
1 3/16 x 1 9/16
American Victorian

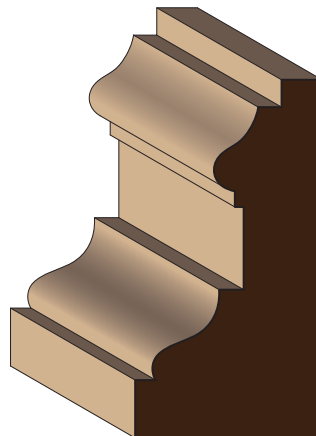


PA 20
1 5/16 x 1 13/16
Italian Late
17th Century

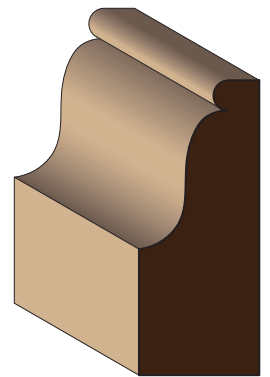


PA 23
5/8 x 1 1/2
American Late
19th Century

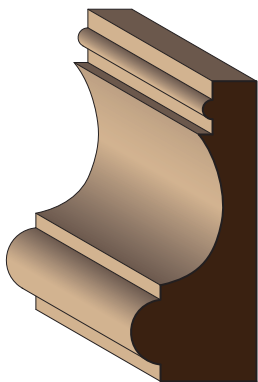


PA 22
5/8 x 1 9/16
American 18th Century

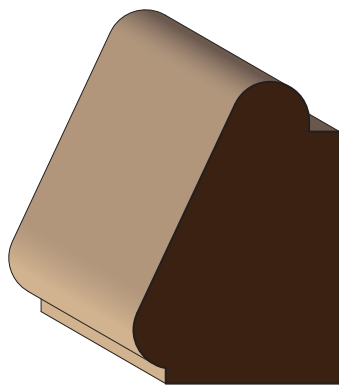

BA 166
1 1/16 x 1 9/16
American Victorian

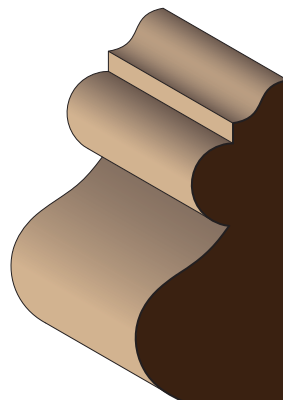

BA 156
3/4 x 1 5/8

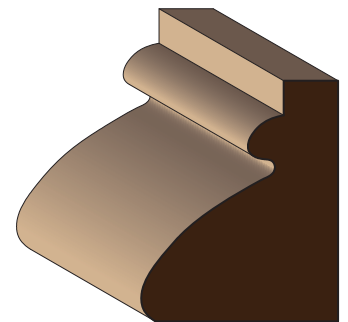

BA 206
1 x 1 1/4
American Late
19th Century